KROWNE®

Oak and Brass Start-up Guide

OBMB-66

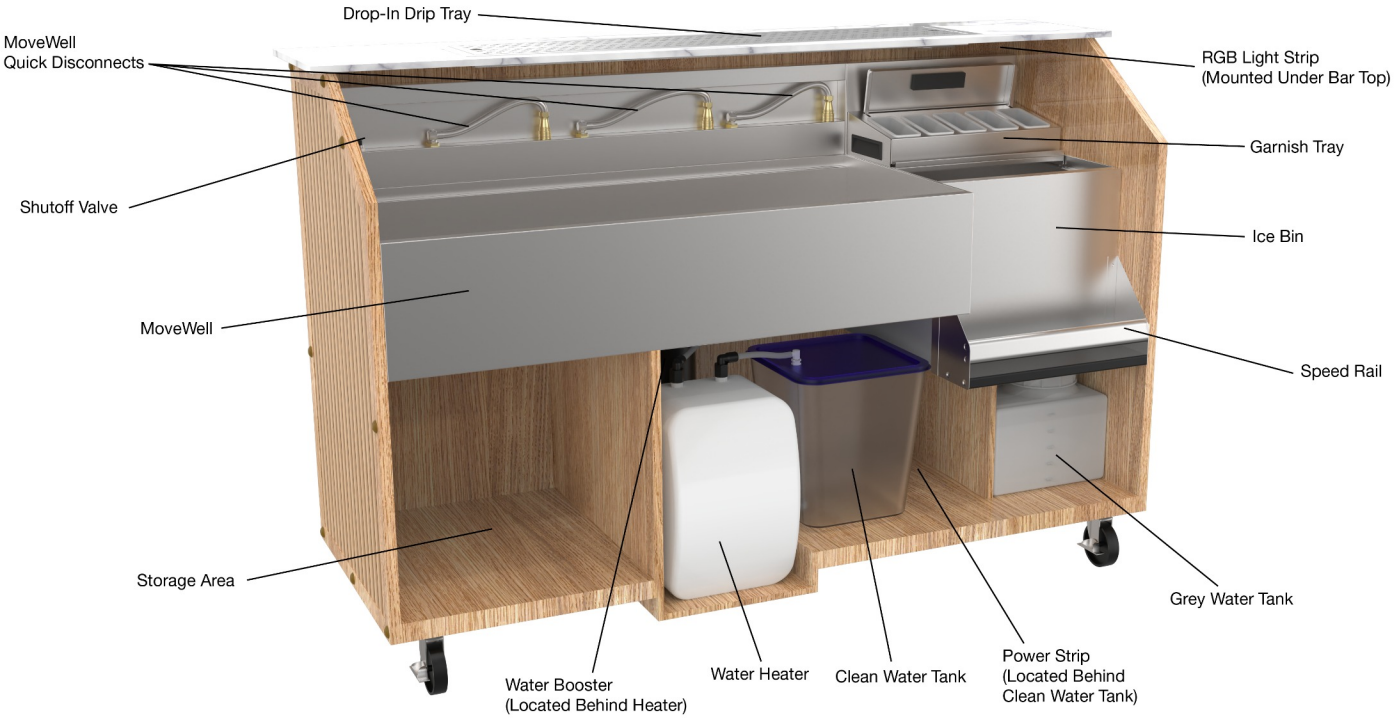


Table of Contents


This manual is organized into the sections listed below.

1 Plumbing Guide 3
2 Install Connections 4
3 Water Shutoff 5
4 Insert Connections 6
5 Water Heater Settings 7
6 Draining Grey Water Tank 8
7 Troubleshooting 9

Plumbing Guide

MoveWell + Ice Bin — Plumbing Hookup

Cabinet split: MoveWell ⅔ · Ice Bin ⅓

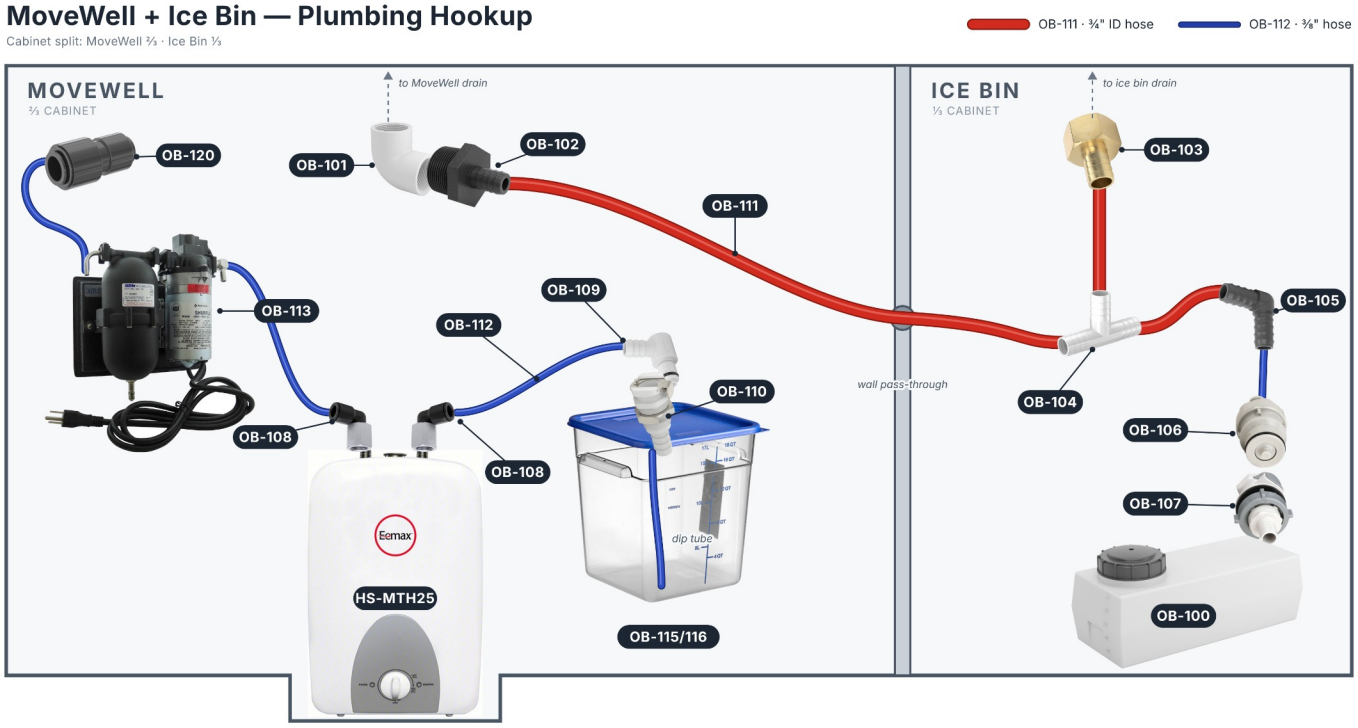

PARTS LIST


OB-100 Poly drain tank w/ cap	**OB-101** PVC 90° elbow, FPT × FPT	**OB-102** MPT × ¾" barb adapter	**OB-103** Brass FPT × ¾" barb	**OB-104** ¾" barbed tee	**OB-105** ¾" barbed 90° elbow	**OB-106** QD insert, valved	**OB-107** QD body, panel mount (tank)	**OB-108** Push-fit 90° × FPT (qty 2)
OB-109 QD elbow insert × barb	**OB-110** QD body, panel mount (lid)	**OB-111** ¾" ID hose	**OB-112** ⅜" hose	**OB-113** Shurflo pump + accumulator	**OB-115/116** 18 qt square container + lid	**OB-120** Push-fit reducing union (A × B)	**HS-MTH25** Eemax mini-tank water heater	

Install Connections



1. Fill clean water bucket (clear bucket with blue top) and make connection.
2. Ensure both water pump and water heater are plugged into extension cord, included and located behind clean water tank.

Water Shutoff

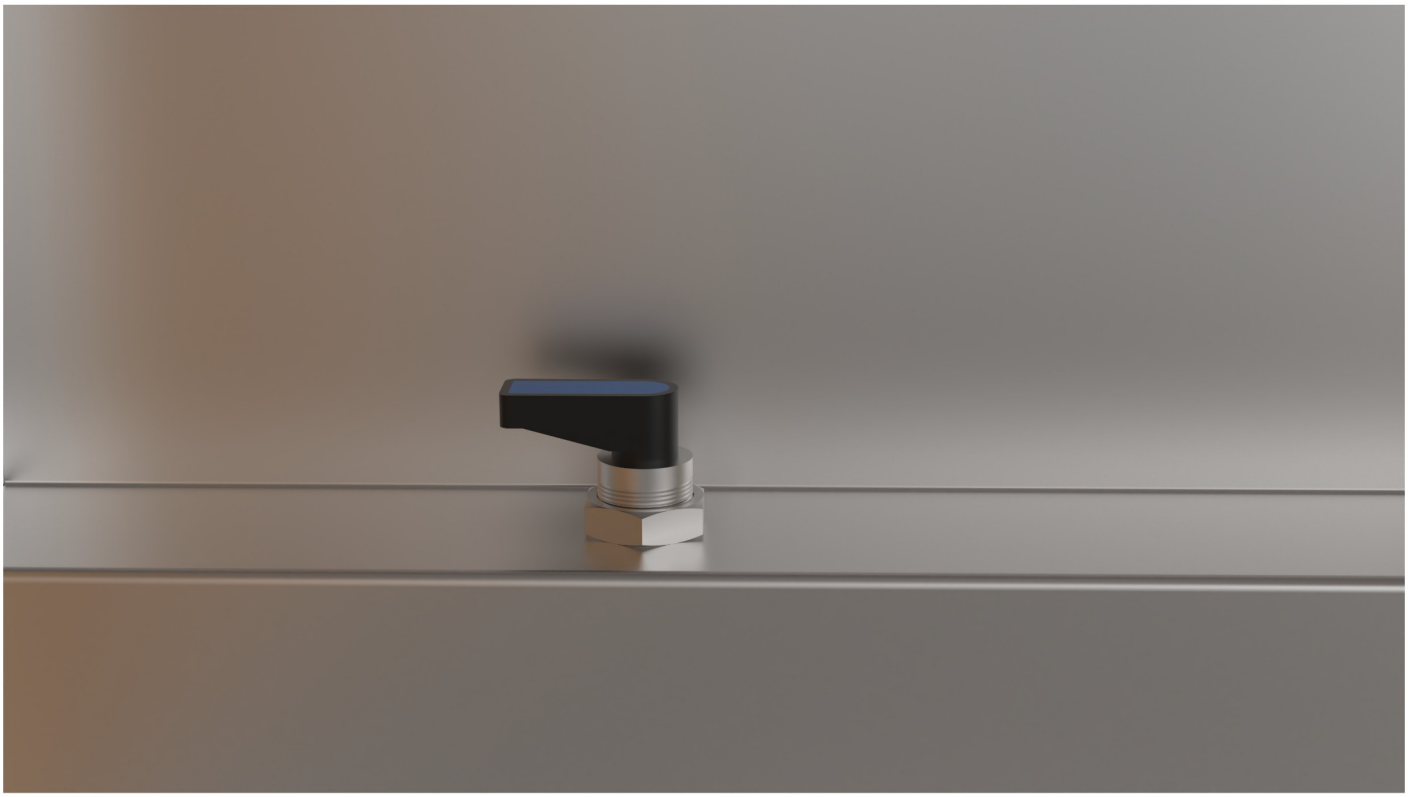

3. Make sure the shut-off valve is open (handle to the side), not closed (handle toward you).

Insert Connections



4. Make connection to a MoveWell insert that requires water and run water through, this will allow any air to leave lines and bladder.
5. You may need to run for some time to allow heater to fill before water will run.

Water Heater Settings



6. Turn the dial to your desired water temperature. In the bottom position, the water heater is OFF.

Draining Grey Water Tank

7. Disconnect the quick disconnect coupler on the top of the grey water tank.
8. Remove tank cap and dump contents

Troubleshooting

- **No water flow**
  1. Ensure both heater and water booster are plugged in
  2. Ensure there is water in the clean water tank and that the connections are fully connected
  3. Ensure the connections to the MoveWell inserts are fully connected
  4. If it has not been run recently, the heater may need to be refilled
  5. Plug a MoveWell insert in that requires water and run it until water flows
- **No hot water**
  1. Make sure heater is plugged in and is receiving power
  2. Check the thermostat dial and see if it is set to low
  3. Check that the outlet of the heater is running to the water booster
  4. If the hot water was recently used for some time, the hot water will need time to reheat
- **Light strip not working**
  1. Check if white plug is plugged into power strip and is receiving power
  2. Under the bartop is a controller, make sure it is also plugged in there
  3. Press power button on controller