




INSTALLATION INSTRUCTIONS for HS-15 16" WIDE with KNEE VALVE FAUCET

INCLUDES:

- (A) HAND SINK
- (B) SINGLE HOLE FAUCET
- (C) KNEE VALVE
- (D) WALL MOUNT BRACKET

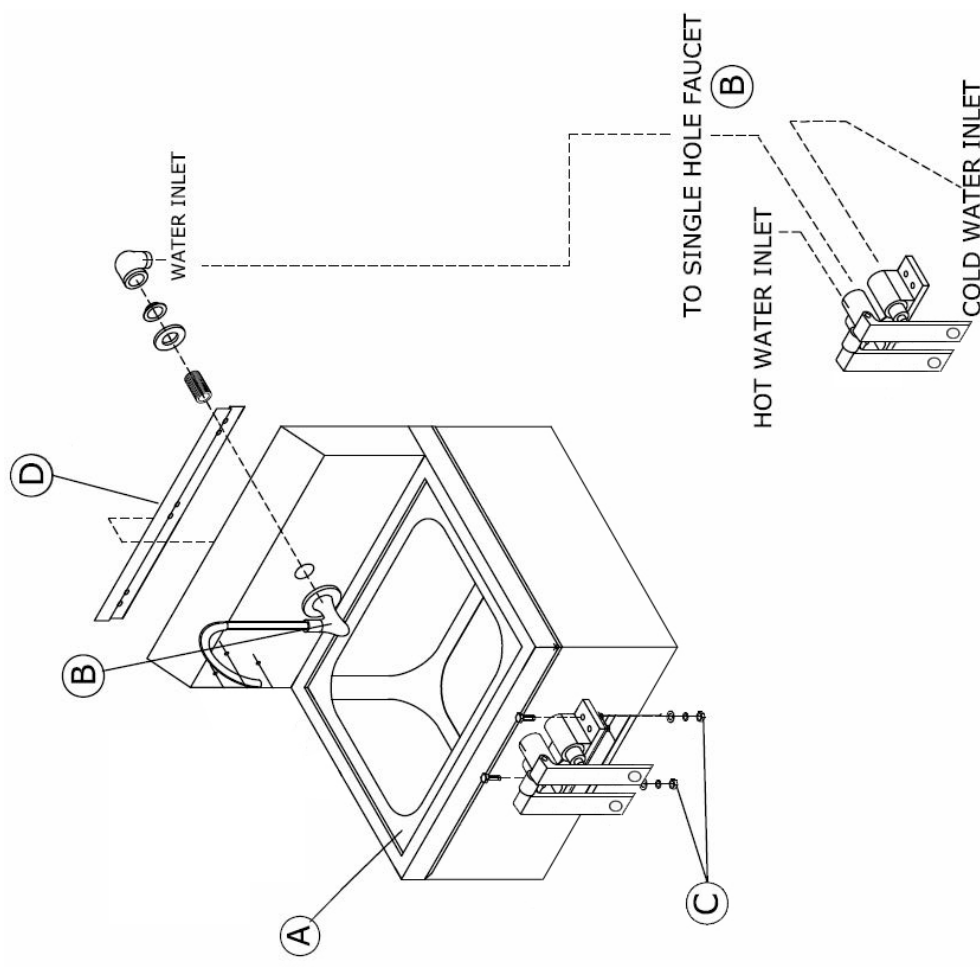

1. Install WALL BRACKET (D) 41^{-3/8}" off finished floor using appropriate hardware (not included)
2. Install KNEE VALVE (C) to front of HAND SINK (A) with appropriate hardware (not included)
3. Install SINGLE HOLE FAUCET (B) on HAND SINK (A) and run water line from center of KNEE VALVE (C) to SINGLE HOLE FAUCET (B).
4. Prepare water line feeds to hook up to KNEE VALVE (C).
5. Hang HAND SINK (A) on WALL BRACKET (D).
6. Install Drain with plumbers putty on top and the rubber washer & locknut below. Make sure top of drain is below surface to allow proper drainage.
7. Hook up water and drain lines to complete the installation.